| ENGINE F | All LIRE | |
|-------------------------|-----------------|--|
| TAKE OFF | | |
| Throttle | | |
| Brakes | | |
| Flaps | | |
| Ignition | OFF | |
| Master switch | | |
| CLIMB | | |
| Insufficient Power | | |
| Airspeed | 60 KIAS | |
| Throttle | FULL | |
| Carburator Heat | ON | |
| Choke | | |
| Fuel Valve | | |
| Ignition | BOTH | |
| Fuel Pump | ON | |
| Prop | -FULL FORWARD | |
| No Power Fuel Valve | CLOSE | |
| Ignition | | |
| Master Switch | | |
| | GHT | |
| Fuel Valve | OPFN | |
| Carburator | | |
| Fuel Pump | | |
| Ignition | | |
| Throttle | NO ACTION | |
| Restart unsuccessful | | |
| Radio | MAYDAY | |
| Transponder | 7700 | |
| Electricsexp | pect MASTER OFF | |
| Landing assured | 01.005 | |
| Fuel Valve | | |
| IgnitionSafety Belts | OFF | |
| | AS REQUIRED | |
| Flaps Battery Master | | |
| Dattery Master | OPF | |

| ELECTRICAL FIRE | |
|---|--|
| GROUND | |
| Gen/Bat OFF Throttle IDLE Fuel Valve CLOSE Ignition OFF Canopy OPENUSE FIRE EXTINGUISHER | |
| IN FLIGHT | |
| Gen/Bat OFF Cabin Air OPEN Cabin Heat OFFUSE FIRE EXTINGUISHERLAND AS SOON AS POSSIBLE If Electrics required Avionic Master OFF | |
| ElectricsOFF | |
| Bat Switch ON Avionic Master ON | |
| Radio ON | |

CABIN FIRE

Gen/Bat -----OFF Cabin Air ----- OPEN Cabin Heat ----- CLOSE -- USE FIRE EXTINGUISHER----LAND AS SOON AS POSSIBLE—

LOW OILPRESSURE

Oil Temp ----- CHECK Oil Temp Normal --LAND AT NEAREST AIRPORT— Oil Temp rising
Power ----- MIN REQUIRED --LAND AS SOON AS POSSIBLE---- EXPECT ENGINE FAILURE--

LOW FUELPRESSURE
Fuel Pump ----- ON Fuel Pressure not rising --LAND AT NEAREST AIRFIELD----EXPECT ENGINE FAILURE--

ELECTRICAL FAILURE

CB Battery ----- CHECK IN Gen/Bat -----CHECK ON If problem persists --LAND AT NEAREST AIRFIELD--

GENERATOR FAILURE

| Gen/BatCYCLE | |
|---------------------------|--|
| CB Generator CHECK IN | |
| CB Gen Control CHECK IN | |
| If problem persists | |
| ElectricsREDUCE LOAD | |
| LAND AT NEAREST AIRFIELD- | |
| ABOUT 30 min CAPACITY | |

LOW VOLTAGE

GROUND

Propeller ----- INCREASE RPM Electrics------ REDUCE LOAD If problem persists

--CANCEL FLIGHT—

IN FLIGHT

Electrics----- REDUCE LOAD If problem persists --SEE GENERATOR FAILURE--

FLAP INDIC. FAILURE

| Flaps | CHECK VISUALLY |
|----------------|-----------------|
| Speed | max 78 KIAS |
| Flaps | CYCLE |
| If Flaps stuck | |
| Up | 68KIAS |
| T/O | NORMAL APPROACH |
| LDG | NORMAL APPROACH |

RUNAWAY TRIM

--CONTROL AIRCRAFT--CB Trim ----- PULL Trim Switch ----- CHECK IF STUCK