



NORMAL TAKEOFF

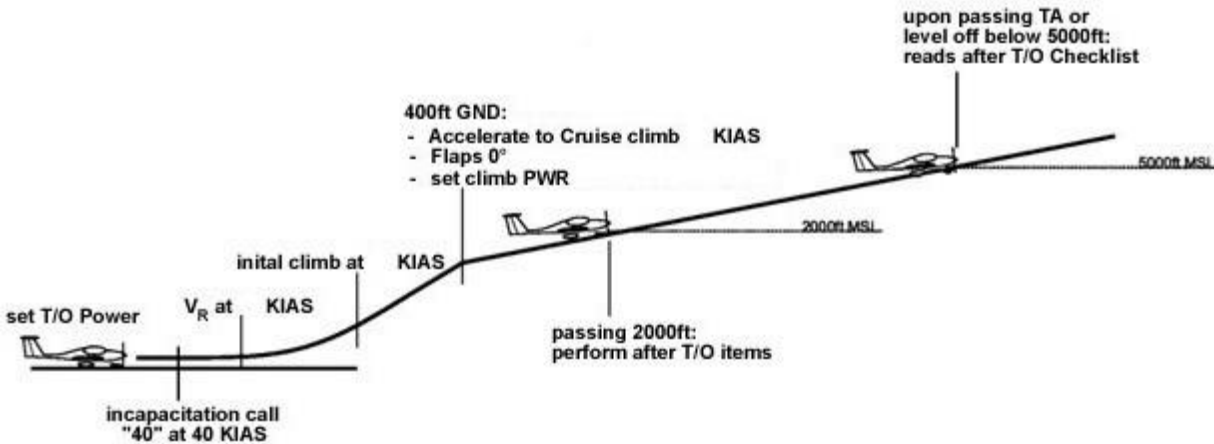

NON-PRECISION APPROACH

Cessna 172

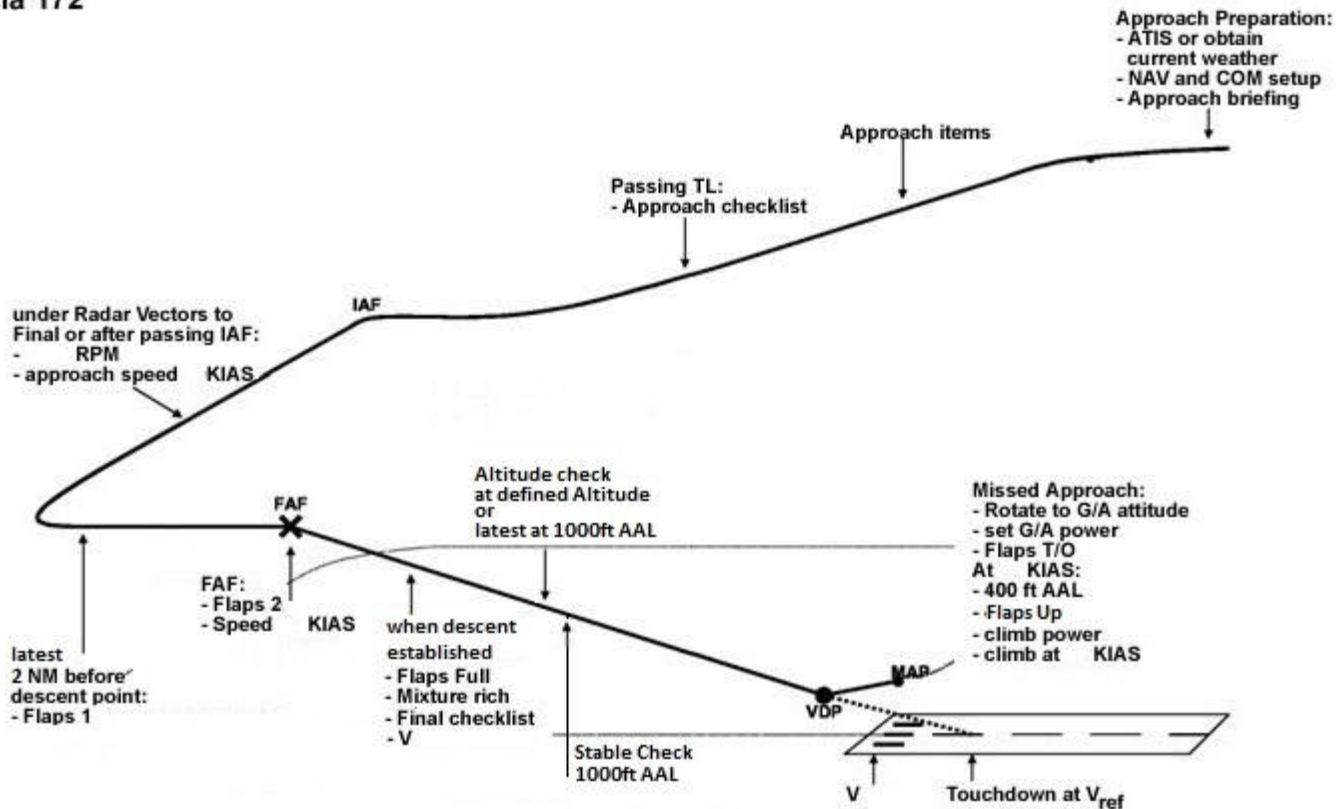

PRECISION APPROACH

Cessna 172

